




BACK GLASS  
GT-408-44

WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME

# PARAGON

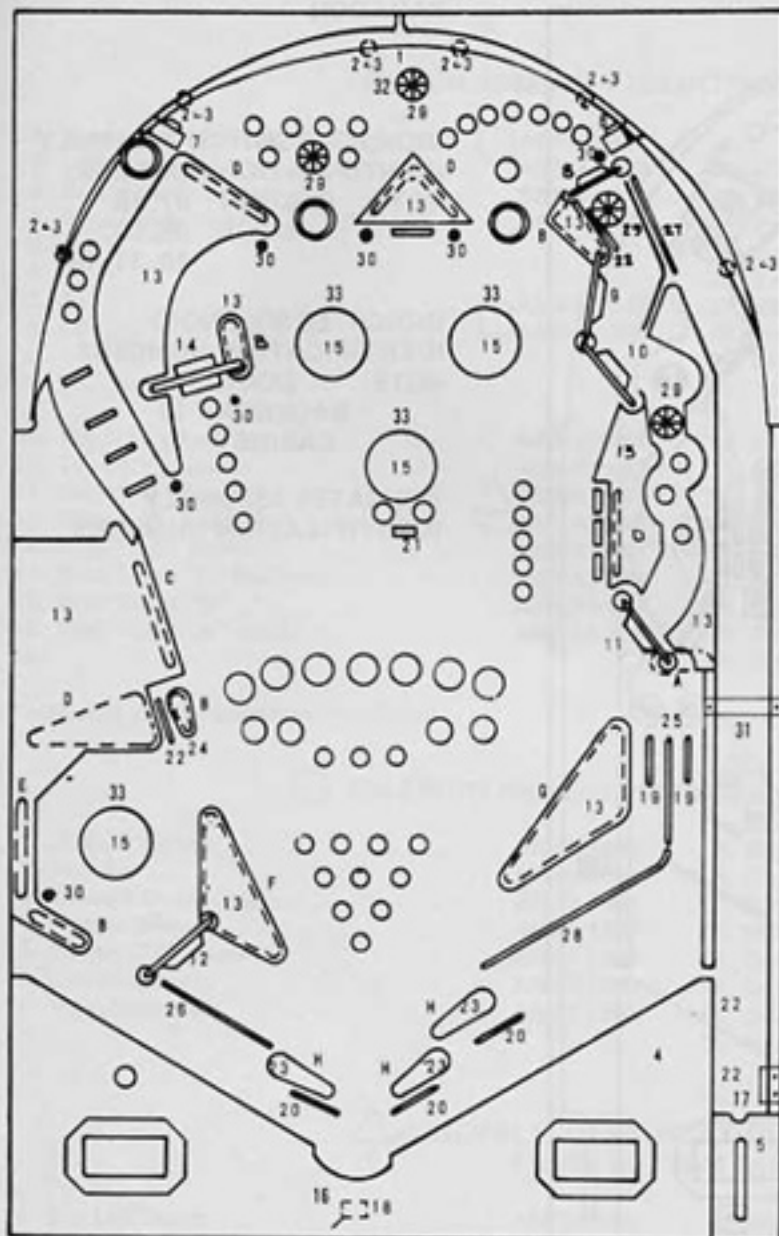

## RUBBER PARTS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

A. R-243	5/8" Dia.	(4)
B. R-521	3/4" Dia.	
C. R-521-1	1" Dia.	(5)
D. R-521-2	1-1/2" Dia.	
E. R-521-3	2" Dia.	(4)
F. R-521-4	2-1/2" Dia.	
G. R-521-5	3" Dia.	
H. R-521-6	3-1/2" Dia.	
I. R-406-3	Flippers*	(3)

## PANEL TOP PARTS

1. Arch Rail . . . . .	M-1774
2. Rail Post . . . . .	C-907
3. Rail Post Cap . . . . .	C-908
4. Bottom Arch . . . . .	P-5871-67
5. Shooter Gauge . . . . .	P-6359-33
6. Ball Gate Assy. (R) . . . . .	A-1475-13
7. Ball Gate Assy. (L) . . . . .	A-1475-12
8. Ball Gate & Wire Assy. . . . .	ASE-2250-11
9. Ball Gate & Wire Assy. . . . .	ASE-2250-59
10. Ball Gate & Wire Assy. . . . .	ASE-2250-25
11. Ball Gate & Wire Assy. . . . .	ASE-2250-18
12. Ball Gate & Wire Assy. . . . .	ASE-2250-60
13. Screened Plastic Set . . . . .	M-1330-161
14. Spinner Gate Assy. (L) . . . . .	A-1475-51
15. Thumper Cap Assy. (4) . . . . .	A-3713-50
16. Outhole Kicker . . . . .	ASE-2694-3
17. Protective Angle . . . . .	P-7639
18. Outhole Wire . . . . .	ASE-2806-21
19. Rollover Wire . . . . .	ASE-2806
20. Ball Guide Wire . . . . .	M-121-53
21. Target Assy. . . . .	ASE-2911-3
22. Ball Guide Wire (4) . . . . .	M-121-46
*23. Flipper & Shaft Assy. (3) . . . . .	ASE-2214-24**
24. Flipper & Shaft Assy. . . . .	ASE-2214-25
25. Ball Guide Wire . . . . .	M-121-18
26. Ball Guide Wire . . . . .	M-121-47
27. Ball Guide Wire . . . . .	M-121-30
28. Ball Guide Wire . . . . .	M-121-83
29. Rollover Button (4) . . . . .	C-900
30. Mini-Post Assy. (7) . . . . .	AS-2836-1***
31. Hood . . . . .	P-1732
32. Panel . . . . .	CA-1226-1
33. Thumper Body (4) . . . . .	ASE-2222-4
34. Post . . . . .	C-951-7
35. Ball Guide Wire . . . . .	M-121-29

\*23. Note: For Germany and France top Right Flipper eliminated. Wire form and Post added as shown below. No. 30 increased to quantity of (8) for these games.



## Note(s):

\* = 2 on German and French Models


\*\* = 2 on German and French Models

\*\*\* = 8 on German and French Models

Post installed into vacant Flipper shaft thru hole.

WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME

PARAGON

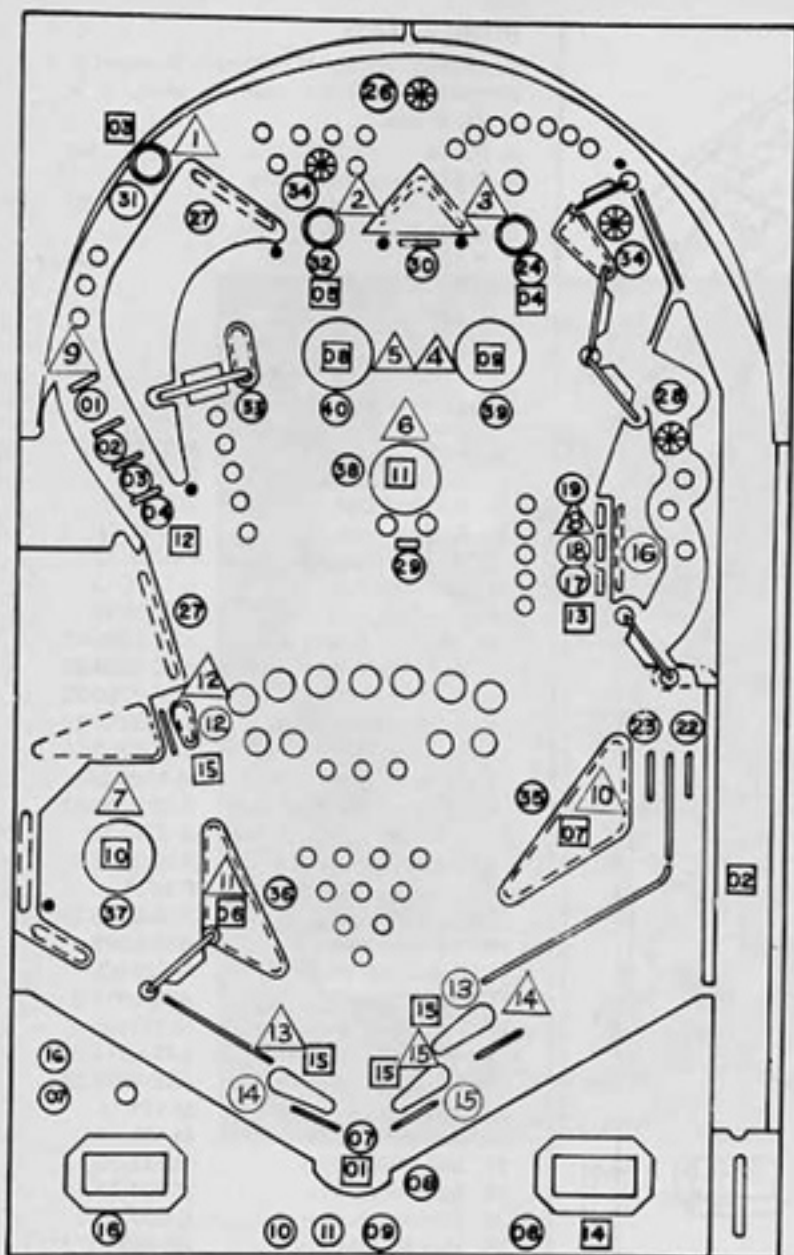

- INDICATES SWITCH ASSEMBLY IDENTIFICATION NUMBERS.  
NOTE: CABINET: 07, 16  
DOOR: 06, 09, 10, 11, 16
- INDICATES SOLENOID IDENTIFICATION NUMBERS.  
NOTE: DOOR: 14  
BACKBOX: 15  
CABINET: 02
- △ INDICATES ASSEMBLY IDENTIFICATION NUMBERS

WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME

# PARAGON

## ○ SWITCH ASSEMBLY IDENTIFICATION NUMBERS

1. Drop target (In Line) "D" (top) . . . . .	ASW-A1-168	21.	
2. Drop Target (In Line) "C" . . . . .	ASW-A1-168	22. Right Outline . . . . .	ASW-A1-155
3. Drop Target (In Line) "B" . . . . .	ASW-A1-168	23. Right Flipper Feeder Lane . . . . .	ASW-A1-155
4. Drop Target (In Line) "A" (bottom) . . . . .	ASW-A1-168	24. Paragon Saucer . . . . .	ASW-A1-153
5.		25. Golden Cliffs Rollover . . . . .	ASW-A10-47
6.		26. Top Center Rollover Button . . . . .	ASW-A1-162
7. Tilt . . . . .	ASW-A1-145	27. 500 Point Rebound (2) . . . . .	ASW-A10-47
8. Outhole . . . . .	ASW-A1-143	28. Waterfall Rollover Button . . . . .	ASW-A1-162
9.		29. Center Target . . . . .	ASW-A1-168
10.		30. Top Center Target . . . . .	ASW-A1-158
11.		31. Treasure Chamber Saucer . . . . .	ASW-A1-153
12. Top (L) Flipper . . . . .	ASW-A20-23	32. Golden Cliffs Saucer . . . . .	ASW-A1-153
13. Top (R) Flipper . . . . .	ASW-A20-23	33. Spinner . . . . .	ASW-A1-151
14. Bottom (L) Flipper* . . . . .	ASW-A10-45	34. Top Right . . . . .	ASW-A10-47
15. Bottom (R) Flipper* . . . . .	ASW-A10-45	35. Right Slingshot . . . . .	ASW-A10-47
16. Drop Target Rebound . . . . .	ASW-A10-47	36. Left Slingshot . . . . .	ASW-A10-47
17. Drop Target "C" (bottom) . . . . .	ASW-A1-168	37. Bottom Thumper Bumper . . . . .	ASW-A110-5
18. Drop Target "B" . . . . .	ASW-A1-168	38. Center Thumper Bumper . . . . .	ASW-A110-5
19. Drop Target "A" (top) . . . . .	ASW-A1-168	39. Right Thumper Bumper . . . . .	ASW-A110-5
20.		40. Left Thumper Bumper . . . . .	ASW-A110-5

\*ASW-A20-23 Also Used With This Switch

## □ SOLENOID AND COIL IDENTIFICATION NUMBERS

1. Outhole Kicker . . . . .	AN-26-1200	8. Left Thumper Bumper . . . . .	AN-26-1200
2. Knocker . . . . .	AR-26-1200	9. Right Thumper Bumper . . . . .	AN-26-1200
3. Treasure Chamber Saucer . . . . .	AO-27-1300	10. Bottom Thumper Bumper . . . . .	AN-26-1200
4. Paragon Saucer . . . . .	AO-27-1300	11. Center Thumper Bumper . . . . .	AN-26-1200
5. Golden Cliffs Saucer . . . . .	AO-27-1300	12. Drop Target (In Line) . . . . .	NO-26-1900
6. Left Slingshot . . . . .	AN-26-1200	13. Drop Target . . . . .	NO-26-1900
7. Right Slingshot . . . . .	AN-26-1200	14. Coin Lockout (Door) . . . . .	FO-36-7000
		15. Flippers . . . . .	AQ-25-500/34-4500

## △ ASSEMBLY IDENTIFICATION NUMBERS PANEL BOTTOM PARTS

1. Top Left Saucer . . . . .	ASE-428-44	8. Drop Target . . . . .	ASE-2795-30
2. Left Saucer . . . . .	ASE-428-44	9. In-Line Drop Target . . . . .	ASE-2993
3. Right Saucer . . . . .	ASE-428-41	10. Right Slingshot . . . . .	ASE-2593-4
4. Right Thumper . . . . .	ASE-1567-13	11. Left Slingshot . . . . .	ASE-2593-4
5. Left Thumper . . . . .	ASE-1567-13	12. Top Left Flipper . . . . .	ASE-1587-109
6. Center Thumper . . . . .	ASE-1567-13	13. Bottom Left Flipper . . . . .	ASE-1587-101
7. Bottom Thumper . . . . .	ASE-1567-13	14. Top Right Flipper* . . . . .	ASE-1587-110
		15. Bottom Right Flipper . . . . .	ASE-1587-102

\*Not used on German and French Models. Replaced by Ball Guide #M-121-29 (2-9/16") and Post #C-951-7, Washer #PW-600-1112, Washer #P-801-107, Elastic Stop Nut #M-319-6 and Screw #MSPR-632-1128.

NOTE: Install Mini-Post Assembly #AS-2836-1, T-Nut #M-1700-8 and Nut #N-632 between lower left plastic and gate post.

For assembly breakdown, see back of book.

**WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME**