




BACK GLASS
G-440-21

WHEN ORDERING PART, SPECIFY PART NO. AND NAME OF GAME

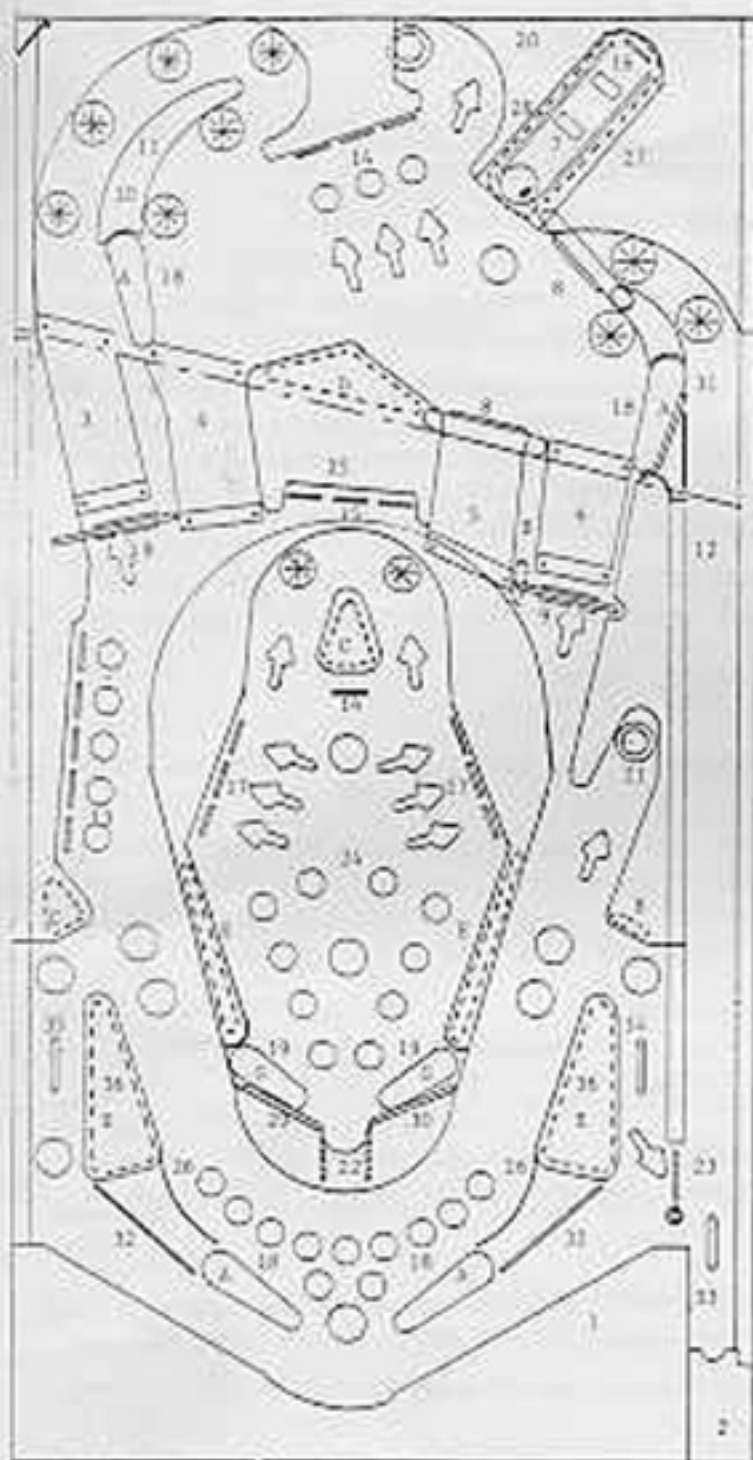

≈ 1240 ELEKTRA

RUBBER PARTS

A. R-530-1	FLIPPER	(4)
B. R-521	3/4" DIA	(4)
C. R-521-1	1" DIA	(2)
D. R-521-3	2" DIA	(1)
E. R-521-4	2 1/2" DIA	(3)
F. R-521-5	3" DIA	(1)
G. R-533-3	FLIPPER	(2)
H. R-521-7	4" DIA	(1)

PANEL PARTS

1. Belted Arch	A-4016-4	
2. Shooter Gauge	P-8109-54	
3. Left Outside Ramp	P-8155-9	
4. Left Inside Ramp	P-8155-8	
5. Right Inside Ramp	P-8155-6	
6. Right Outside Ramp	P-8155-7	
7. (2) Drop Target	ASE-2993-20	
8. Gate & Wire Assn.	ASE-2250-24	(2)
9. Spinner Assn.	ASE-2210-101	(2)
10. Screened Plastics	M-1330-198	
11. Clear Plastics & Bushing	A-2980-163	
12. Shooter Lane Ramp	P-8105-5	
13. Target Switch (Blue)	ASE-2911-83	(5)
14. Target Switch (Green)	ASE-2911-85	(4)
15. Target Switch (Red)	ASE-2911-82	(3)
16. Target Switch (Red)	ASE-2911-87	(1)
17. Target Switch (Amber)	ASE-2911-86	(5)
18. Molded Flipper	A-3994-5	(4)
19. Transparent Flipper	A-4013-1	(2)
20. Eject Hole	ASE-428-41	
21. Eject Hole	ASE-428-49	
22. Ball Kick Assn.	ASE-1566-27	
23. Channel Gate Wire	M-1335-1	
24. Playfield Plexiglass	M-1950	
25. Light Reflector	P-8183	
26. Ball Guide	A-3032-80	
27. Ball Guide Wire	M-121-122	
28. Ball Guide Wire	M-121-123	
29. Ball Guide Wire	M-121-120	
30. Ball Guide Wire	M-121-121	
31. Ball Guide Wire	M-121-93	
32. Ball Guide Wire	M-121-124	(2)
33. Wire Actuator	ASE-2809-39	
34. Wire Actuator	ASE-2809-34	
35. Wire Actuator	ASE-2809-35	
36. Stringhol Assn.	ASE-2593-9	(2)

GAME # 1248 ELEKTRA
SOLENOID IDENTIFICATION TABLE

Self
Test # SOLENOID IDENTIFICATION

01	KNOCKER
02	TOP SAUCER
03	RIGHT SAUCER
04	LEFT SLINGSHOT
05	RIGHT SLINGSHOT
06	INLINE DROP TARGET RESET
07	OUTHOLE KICKER
08	LOWER LEVEL SAUCER
09	RIGHT OUTLANE GATE
10	COIN LOCKOUT DOOR
11	K1 RELAY (FLIPPER ENABLE)

NOTE: TO TEST LOWER PANEL
FLIPPERS PRESS AND HOLD TEST
BUTTON ON LEFT SIDE OF
TOP PANEL.

Switch
Self
Test # DESCRIPTION

01	OUTHOLE
02	LEFT AND RIGHT OF OUTHOLE
03	RIGHT SAUCER
04	TOP SAUCER
05	LEFT FLIPPER BUTTON
06	CREDIT BUTTON
07	2X BONUS TARGET (LOWER LEVEL)
08	SAUCER (LOWER LEVEL)
09	COIN III (RIGHT)
10	COIN I (LEFT)
11	COIN II (MIDDLE)
12	SHOOTER LANE ROLLOVER
13	RIGHT OUTLANE
14	LEFT OUTLANE
15	TILT (3)
16	SLAM (2)
17	FLIPPERS E.O.S. (LOWER LEVEL)
18	1ST INLINE DROP TARGET
19	2ND INLINE DROP TARGET
20	INLINE BACK TARGET
21	#1 TOP TARGET & LOWER LEVEL #1 TARGET
22	#2 TOP TARGET & LOWER LEVEL #2 TARGET

Switch
Self
Test # DESCRIPTION

23	#3 TOP TARGET & LOWER LEVEL #3 TARGET
24	SPECIAL ROLLOVER BUTTON
25	RIGHT SPINNER & LOWER LEVEL RIGHT R.O. BUTTON
26	LEFT SPINNER & LOWER LEVEL LEFT R.O. BUTTON
27	TOP RIGHT 3 R.O. BUTTONS
28	TOP LEFT 3 R.O. BUTTONS
29	MIDDLE #1 TARGET (L) & LOWER LEVEL #4 TARGET
30	MIDDLE #2 TARGET & LOWER LEVEL #5 TARGET
31	MIDDLE #3 TARGET (R) & LOWER LEVEL #6 TARGET
32	10 POINT REBOUND (2)
33	LEFT SIDE #1 TARGET (BOTTOM)
34	LEFT SIDE #2 TARGET
35	LEFT SIDE #3 TARGET
36	LEFT SIDE #4 TARGET
37	LEFT SIDE #5 TARGET (TOP)
38	TOP SHOOTER LANE R.O. BUTTON (2)
39	RIGHT SLINGSHOT
40	LEFT SLINGSHOT

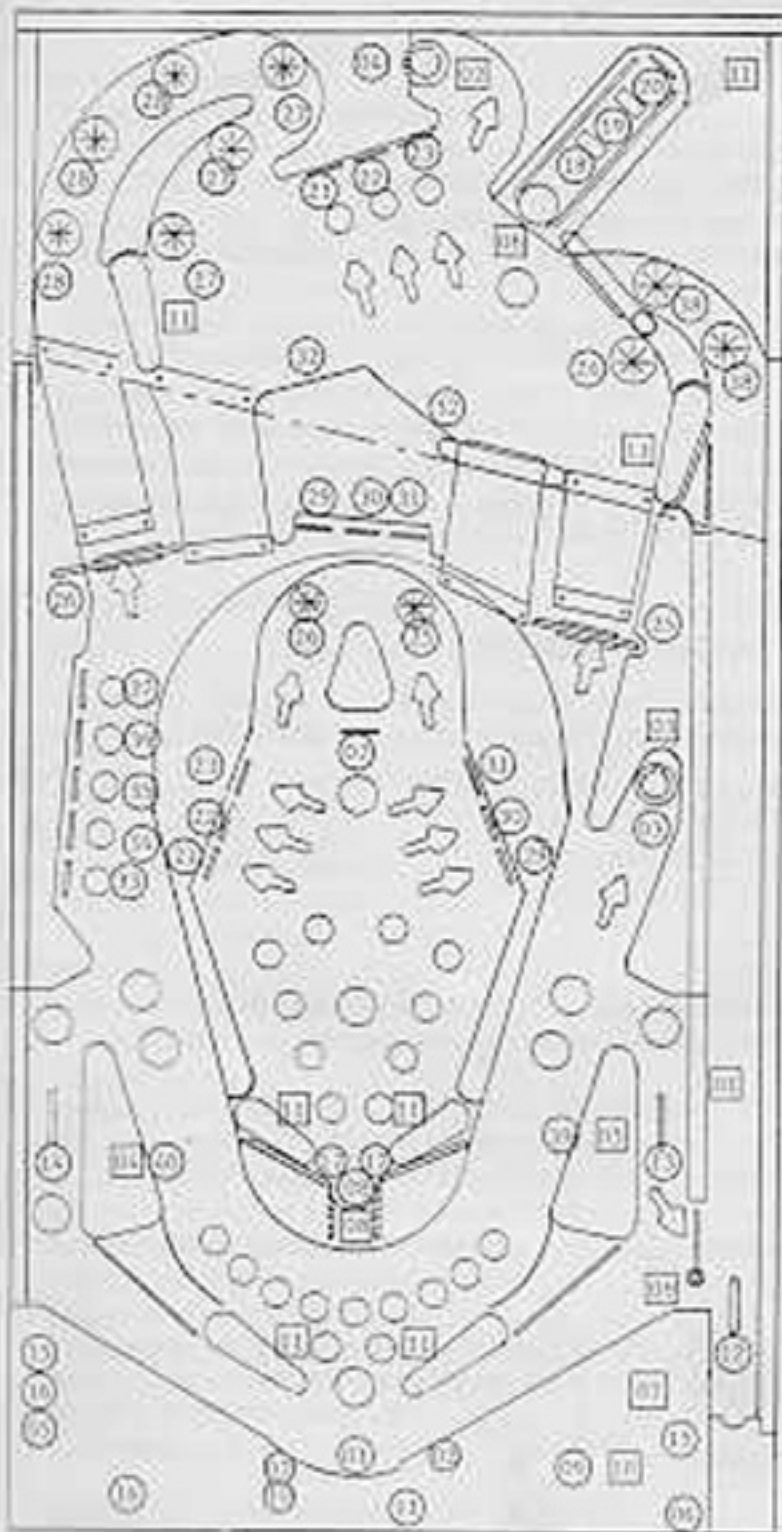


FIGURE 1

#1248 ELEKTRA

**INDICATES SWITCH ASSEMBLY
IDENTIFICATION NUMBERS**

NOTE: CABINET: 15, 16, 05
DOOR: 06, 09
10, 11, 16

**INDICATES SOLENOID
IDENTIFICATION NUMBERS**

NOTE: DOOR: 10
BACKBOX: 11
CABINET: 01