


**X'S AND O'S (0391)  
RUBBER PARTS**

- A. 0017-00041-0653 Flipper (2)
- B. 0017-00041-0633 Mini Post (17)
- C. 0017-00041-0645 2" Dia (2)
- D. 0017-00041-0644 1 1/2" Dia (2)
- E. 0017-00041-0643 1" Dia (5)
- F. 0017-00041-0642 3/4" Dia (5)
- G. 0017-00041-0637 5/16" Dia (4)

**PANEL PARTS**

- 1. Bottom Arch 0391-00105-0000
- 2. Shooter Gauge 0391-00106-0000
- 3. Feature Lens 0391-00902-0000
- 4. Feature Lens Spacer  
0391-00901-0000
- 5. Ball Guide Assy. A391-00014-0000
- 6. Ball Guide Assy. A371-00010-0000
- 7. Ball Guide Assy. A391-00013-0000
- 8. Ball Guide Assy. A391-00012-0000
- 9. Ball Guide Assy. A391-00019-0000
- 10. Wire and Bracket A391-00030-0000
- 11. Wire and Bracket A391-00027-0000
- 12. Wire and Bracket A391-00027-0000
- 13. Wire and Bracket A391-00029-0000
- 14. Wire and Bracket A371-00040-0000
- 15. Wire and Bracket A391-00023-0000
- 16. Wire and Bracket A391-00022-0000
- 17. Guide Wire 0627-00172-0000
- 18. Guide Wire 0360-00957-0084
- 19. Guide Wire 0360-00957-0065
- 20. Guide Wire 0360-00175-5600
- 21. Flipper Assy. A360-00268-0000
- 22. Flipper Assy. A360-00267-0000
- 23. Flipper Assy. A331-00027-0000
- 24. Drop Target Assy. A391-00035-0000
- 25. Thumper Bumper Cap  
A391-00038-0000
- 26. Thumper Bumper Collar  
0017-00042-0403
- 27. Mini-Post A967-00063-0000
- 28. Mini-Post A360-00218-0000
- 29. Target Assy. A391-00043-0000
- 30. Wire Actuator Assy.  
A967-00062-0000 (5)
- 31. Wire Actuator Assy.  
A360-00216-0000 (1)
- 32. Wire Actuator Assy.  
A331-00042-0000 (2)
- 33. Thumper Bumper Assy.  
A967-00053-0000 (3)
- 34. Wire Actuator Assy.  
A360-00215-0000 (1)
- 35. Ball Guide Assy.  
A391-00018-0000
- 36. Wire Actuator Assy.  
A360-00217-0000

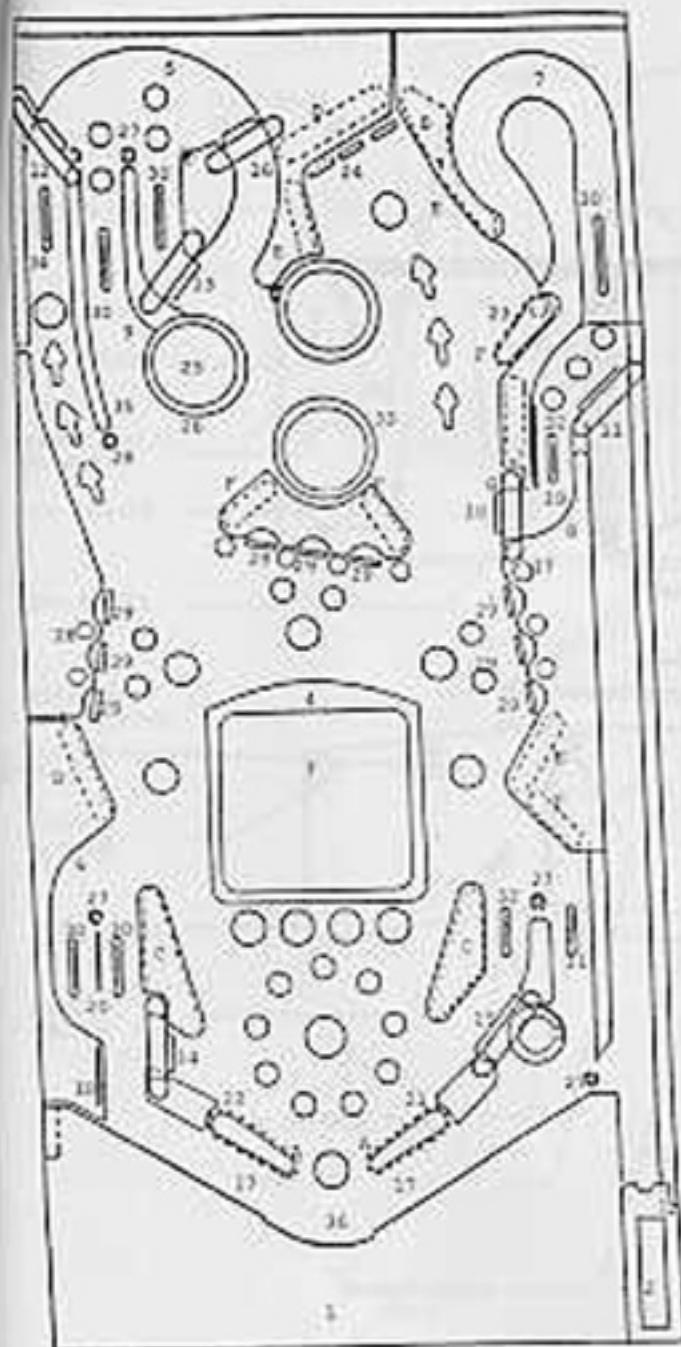


**GAME #0391 X'S AND O'S  
SOLENOID IDENTIFICATION TABLE**

Self Test #	SOLENOID IDENTIFICATION
01	3 DROP TARGET RESET
02	SAUCER
03	OUTHOLE
04	TOP THUMPER BUMPER
05	LEFT THUMPER BUMPER
06	BOTTOM THUMPER BUMPER
07	KNOCKER
08	COIN LOCKOUT DOOR
09	K1 RELAY (FLIPPER ENABLE)

**SWITCH ASSEMBLY SELF-TEST DISPLAY NUMBERS**

Switch Self Test #	DESCRIPTION	Switch Self Test #	DESCRIPTION
01	3 DROP TARGET (LEFT)	18	BOTTOM THUMPER BUMPER
02	3 DROP TARGET (MIDDLE)	19	LEFT THUMPER BUMPER
03	3 DROP TARGET (RIGHT)	20	TOP THUMPER BUMPER
04	SAUCER	21	TARGET RIGHT (TOP)
05	EXTRA BALL/50,000 LANE	22	TARGET RIGHT (CENTER)
06	CREDIT BUTTON	23	TARGET RIGHT (BOTTOM)
07	30 POINT REBOUND (4)	24	"KILL" SKILL SHOT LANE
08	OUTHOLE KICKER	25	TARGET LEFT (TOP)
09	COIN III (RIGHT)	26	TARGET LEFT (CENTER)
10	COIN I (LEFT)	27	TARGET LEFT (BOTTOM)
11	COIN II (MIDDLE)	28	SKILL SHOT LANE
12	LEFT AND RIGHT OUTLANE	29	TARGET CENTER (TOP)
13	RIGHT RETURN LANE	30	TARGET CENTER (CENTER)
14	SPECIAL/100,000 LANE	31	TARGET CENTER (BOTTOM)
15	TILT (3)	32	LEFT SIDE ARROW LANE
16	SLAM (2)	40	BOTTOM LEFT AND RIGHT REBOUND
17	LEFT RETURN LANE		

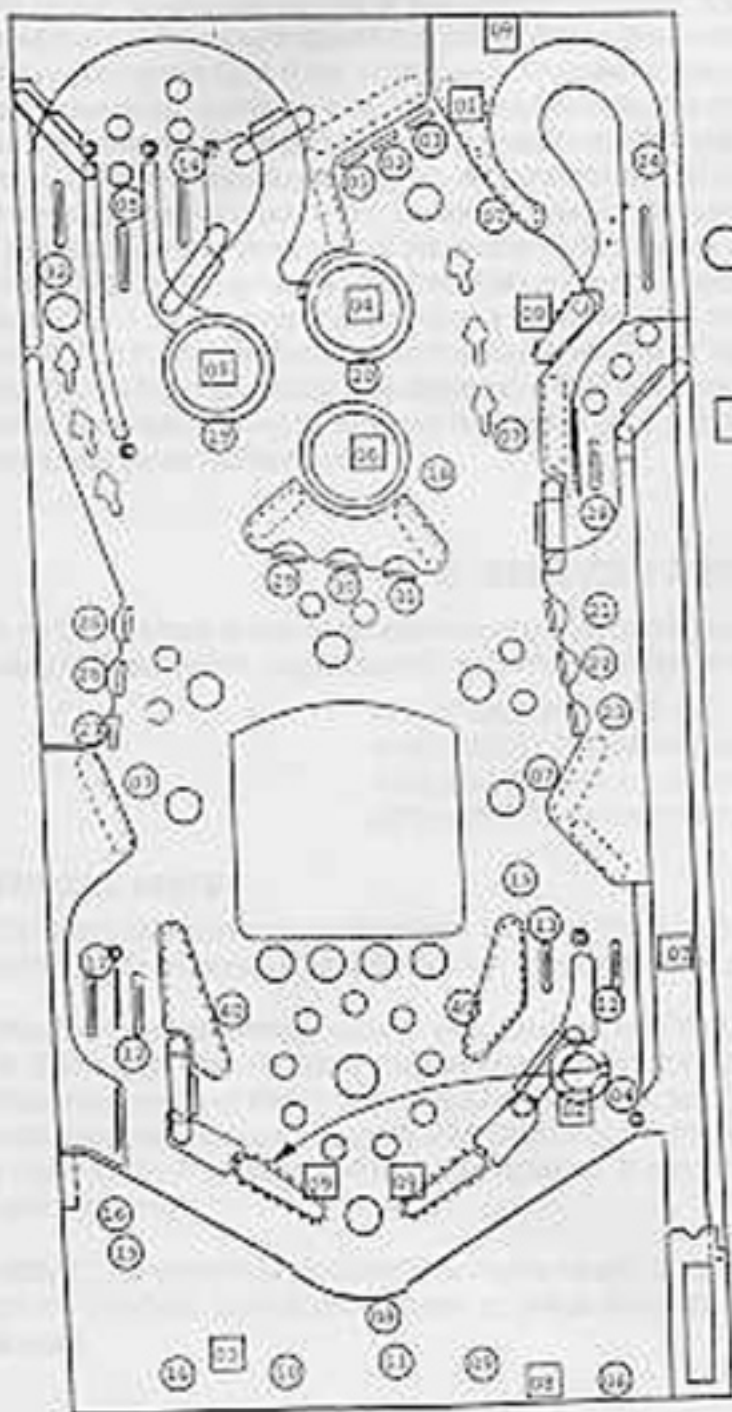

#0201 X's and O's

INDICATES SWITCH ASSEMBLY  
 IDENTIFICATION NUMBERS  
 NOTE: CABINET: 15, 16  
 DOOR: 26, 03  
 10, 11, 18

INDICATES SOLENOID  
 IDENTIFICATION NUMBERS  
 NOTE: DOOR: 08  
 BACKBOX: 09  
 CABINET: 07

VECTOR SHOWING FOR EXACT LOCATION

TO BE SIGNED ABOUT AS SHOWN BY  
 ARROW

FIGURE V